

There are several possible causes for a smoking fireplace:

- A fireplace opening too large for the size of the flue
- Downdrafts
- Negatively pressurized home
- Double flues too close together

Possible solutions (not in any order) include:

- Smoke guard
- Exhausto fan
- Outside air kit
- Top-mounted damper